



Parts required for fitting to the VITO AFS

If a MOB 2 is purchased from a retailer you will require a clip to attach to the VITO AFS.

DW-MOBCLIP/V2

- 1 Slide toggle on to ribbon and pass ribbon through inside slot hole on grey plastic activation slider on left hand side.




- 2 Pass ribbon up through outside slot hole



- 3 Pass ribbon down through inside slot hole.



- 4 Leave roughly 60mm of tail of ribbon tail. Length of ribbon should roughly be the length from bladder weld to weld

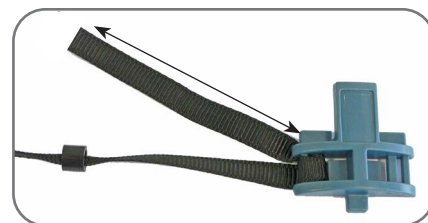

- 5 Slide ribbon tail through toggle



- 6 Insert the antenna into the top and place the rewind tool into the antenna end. Wind the antenna anti-clockwise with the tool until the antenna is fully coiled. Do not remove the tool until the slider is in place



- 7 Attach slider to MOB 1



- 8 Place toggle into gap on left hand side of the slider and lay tail of ribbon across slider. Attach plastic Armed clip over the top.




- 9 Slide the MOB 2 clip to the PLD attachment point by the whistle and oral tube. Clip the MOB 2 into place.



- 10 Run the ribbon underneath the bladder starting on the left - Pink side.



- 11 Once the ribbon has passed underneath the bladder:
- A. Feed the ribbon through the inner slot on the bracket.
 - B. Loop the tape over the bracket and then feed the ribbon up through the outer slot.
 - C. Pass the ribbon down through the inner slot and start to pull the ribbon tight.

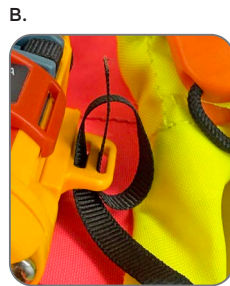

- 12 Test for tightness by ensuring you can freely insert a finger in between the tape and the bladder. Re adjust if it is too tight.



- 13 Pass both ends of the cord that is supplied with the unit through the slot on top of the MOB 1 unit.
- Pass the cord ends through the remaining loop.



- 14 Secure the remaining cord to the loop on the side of the cover with a knot.
- This is to ensure the unit is always attached to Deckvest.

